

ALIUM


Rimlock Open and Close

Spare Parts Guide for CSS,
Sales Representatives, and Customers

2024

Open the rimlock

Loosen the rimlock screw located on the side of the lower rim. Do NOT try to unscrew the special Alium nut, as it is not a screw.

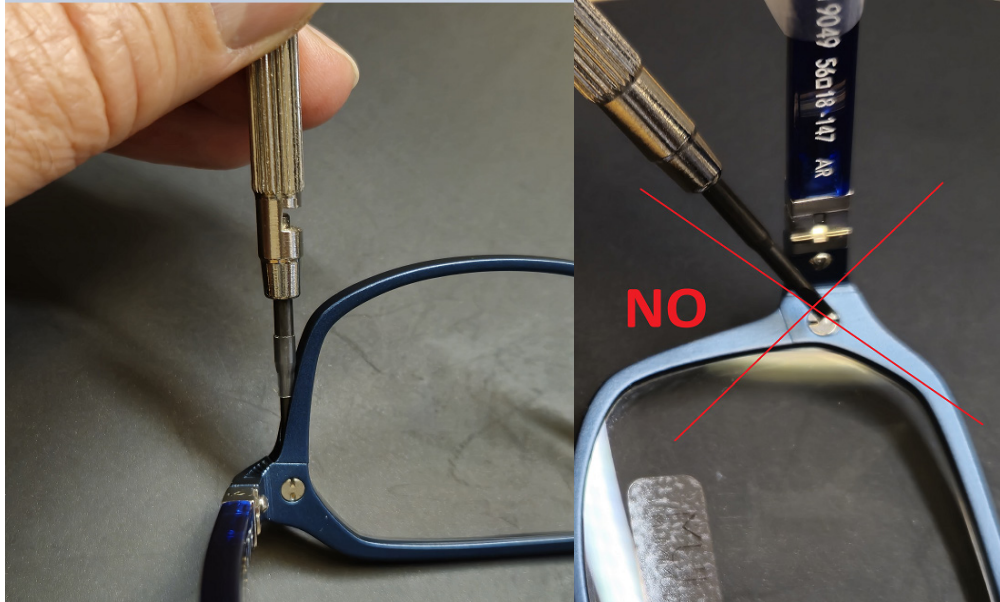

Do not unscrew the rimlock screw completely. Only so it is enough to unmount and remount the lenses.



Mount the lens and tighten the rimlock screw.

How to remount the Alium rimlock nut if the nut falls out:



Put the Alium nut back in place and align it so the marks in the nut follow the direction of the screw and then tighten the screw.

