

ALIUM

Temple Core Replacement

Spare Parts Guide for CSS,
Sales Representatives, and Customers

2024

Fault categories

Loose spring hinge effect



Broken hinge part or hinge fallen apart



Broken hinge part or hinge fallen apart

- Heat and straighten the ear bend
- Pull off the temple sleeve while the temple is still mounted in the front.
- Screw off the defect temple core
- Mount the new temple core into the acetate temple sleeve and bend the ear bend again
- Mount the temple on the front again and adjust the earbend

Disassemble and assemble hinge with broken spring hinge or hinge fallen apart.

- Heat and straighten the ear bend
- Pull off the temple sleeve using a pair of pliers



- Screw off the defect hinge part
- Mount the new temple core into the acetate temple sleeve and bend the ear bend again
- Mount the temple on the front again and adjust the earbend

