

PROFLEX

Lens installation

Scan here for the video:



prodesign  denmark

PROFLEX Lens installation

OPEN




Use the UPPER screw to open the rimlock...



Open the rimlock with a firm push away from the face

CLOSE

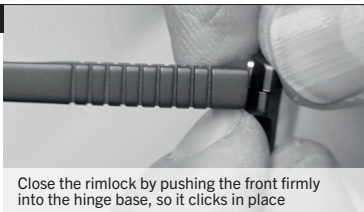

Close the rimlock by pushing the front firmly into the hinge base, so it clicks in place



Remount the screw