


PD Medley 1-3 lens removal and insert

1. Loosen the rimlock screws and press out the demo lenses as if the frame was a normal acetate frame. The rimlock will open slightly.

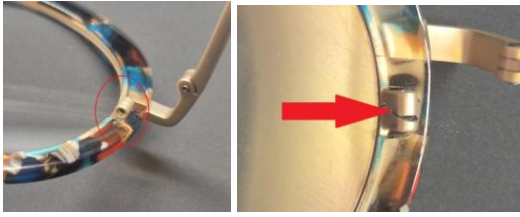

2. Mount the Prescription lenses from the front side.
3. The frame can be gently heated to make it easier to mount the lenses, especially high-prescription lenses.
4. Remount the rimlock screws.